

# L1 PROJECTOR SYSTEM




**TURNING ON SYSTEM** **2**

**SHARE PROJECTOR SCREEN WITH  
LAPTOP/MACBOOK/TABLET/IPAD** **2**


**SHARE DOCUMENTS WITH DOC CAM** **3**

**PLAY CD/DVD/VHS** **4**

CONTROL PANEL ON PODIUM (TURNING ON)

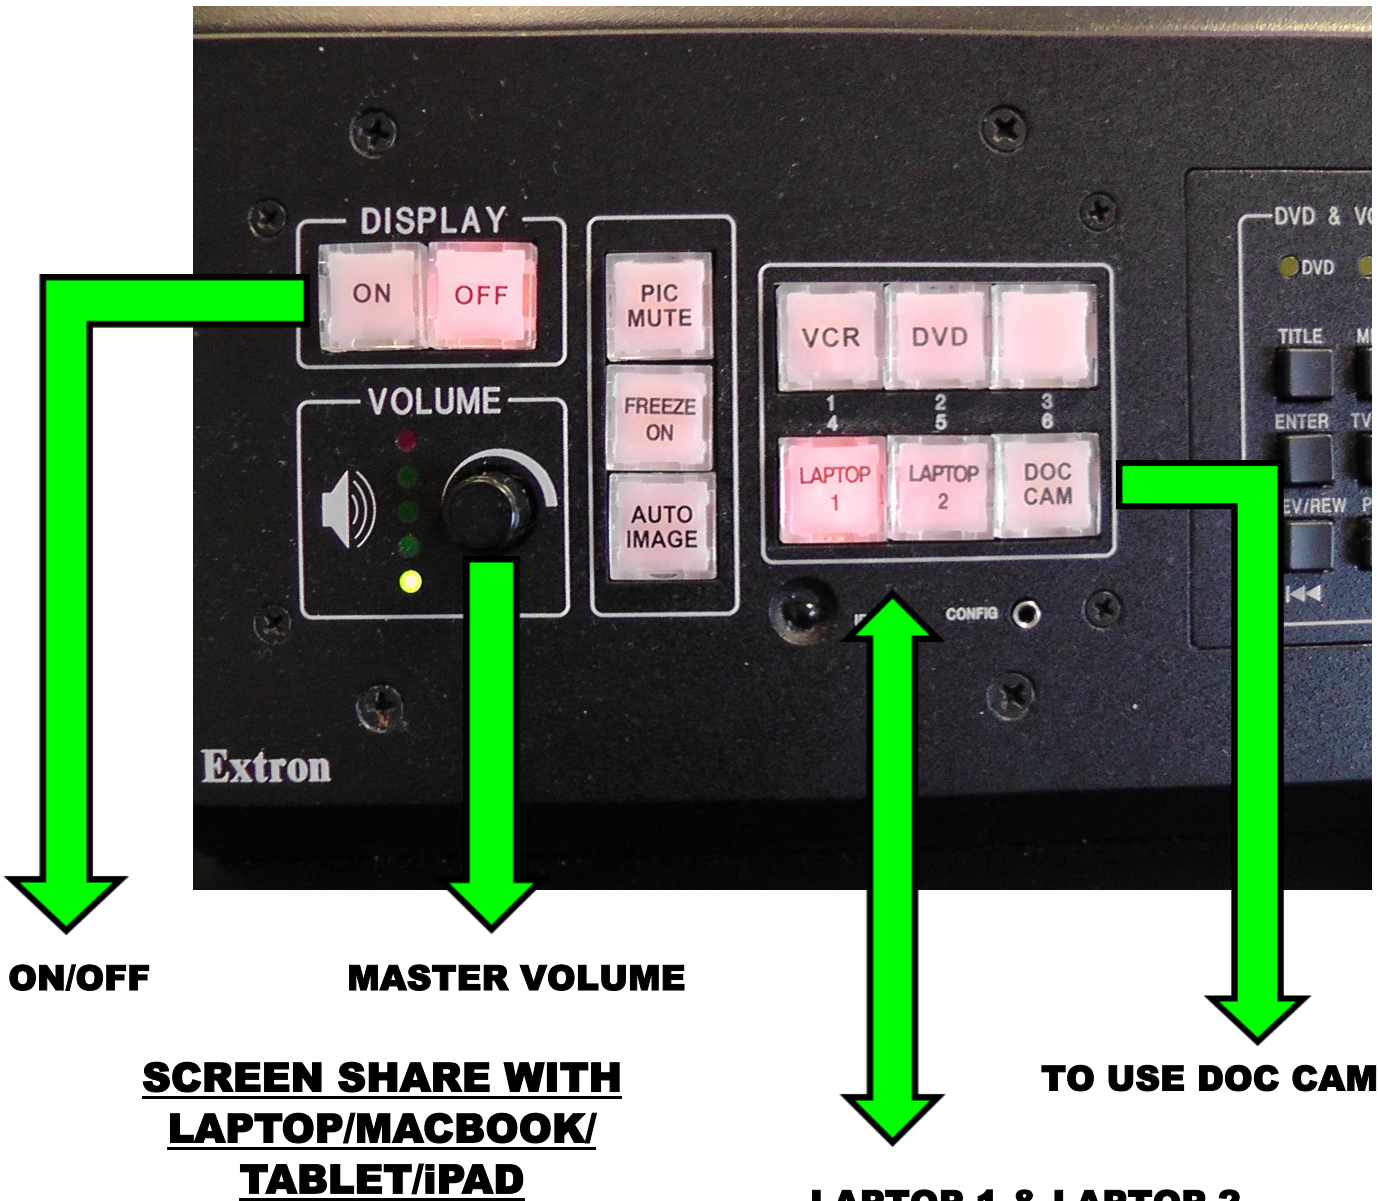

- **AN ADAPTER MAY NEED TO BE USED BETWEEN THE DEVICE AND THE VGA CORD**
- **ONCE DEVICE IS CONNECTED PRESS THE CORRESPONDING SELECTION ON THE CONTROL PANEL TO SHARE SCREEN**
- **LAPTOP 1 = LAPTOP 1 CORD**
- **LAPTOP 2 = LAPTOP 2 CORD**

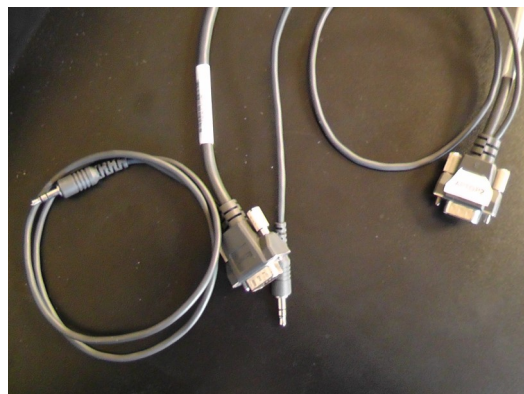

## SHARE SCREEN WITH DOC CAM



- ONCE PROJECTOR IS TURNED ON, WAIT FOR COUNT DOWN TO FINISH BEFORE SELECTING "DOC CAM" ON THE CONTROL PANEL



- TURN ON DOC CAM



- PLACE OBJECT/DOCUMENT ON DOC CAM PLATFORM TO PROJECT ONTO SCREEN

PLAY A DVD, VHS, OR AUDIO CD

OPEN THE CABINET DOOR OF THE PODIUM TO ACCESS THE DVD, VHS, & CD PLAYERS



VCR PLAYER

PRESS "VCR" TO CONNECT  
VCR PLAYER TO SCREEN



DVD & CD PLAYER

PRESS "DVD" TO CONNECT DVD  
PLAYER TO SCREEN  
(CD'S CAN BE PLAYED IN DVD PLAYER)