
# G133 CLASSROOM TECHNOLOGY



TURNING ON SYSTEM	2
SHARE HDTV SCREENS WITH	
LAPTOP/MAC	3 - 5
PLAY CD/DVD	6
SHUTTING DOWN SYSTEM	7

#### **CONTROL PANEL ON FRONT WALL**

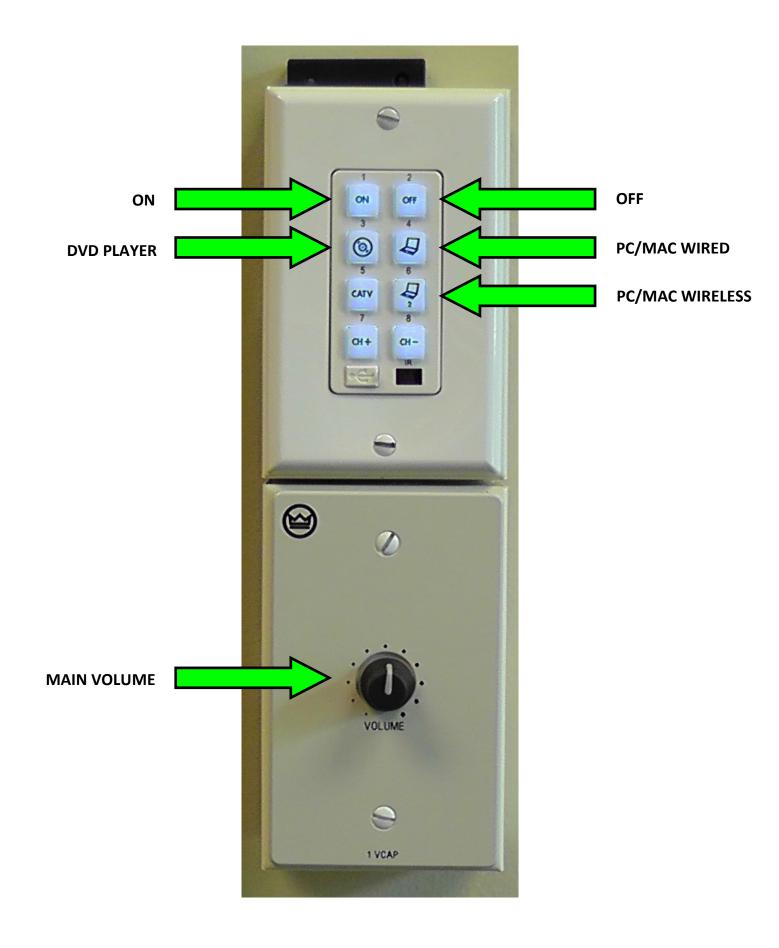

#### **SCREEN SHARE WITH LAPTOP/MAC**

- AN ADAPTER MAY NEED TO BE USED BETWEEN YOUR DEVICE AND THE HDMI CORD THAT CONNECTS TO THE SCREENS (PORT IS IN THE FLOOR)
- ONCE DEVICE IS CONNECTED EITHER YOUR SCREEN WILL AUTOMATICALLY MIRROR ON THE HDTVs OR YOU WILL NEED TO ADJUST YOUR PC/MAC's PROJECTION SETTINGS TO SET UP MIRRORING (EXTEND)

#### **LAPTOP/MAC**

## **CONNECTION ADAPTER TYPE CORD TYPE DETAILS**TYPE







MAC DISPLAY PORT +
DISPLAY PORT
ADAPTER +
LARGE HDMI CORD





PC/MAC HDMI PORT + LARGE HDMI CORD





+ MINI HDMI PORT + MINI HDMI CORD (BOTH ENDS HDMI 1 END SMALLER THAN THE OTHER)









PC VGA PORT + VGA ADAPTER +

LARGE HDMI CORD

#### SCREEN SHARE WITH LAPTOP/MAC (wired)

- ALL ADAPTERS AND CORDS ARE STORED IN THE BACK CLOSET OF G133
- THE WIRED HDMI CONNECTION TO THE SCREENS IS IN THE FLOOR NEAR THE FRONT-CENTER OF THE ROOM
- THE WIRELESS CONNECTION USES LITESHOW PRESENTER SOFTWARE SOFTWARE INSTALLATION IS REQUIRED AHEAD OF TIME

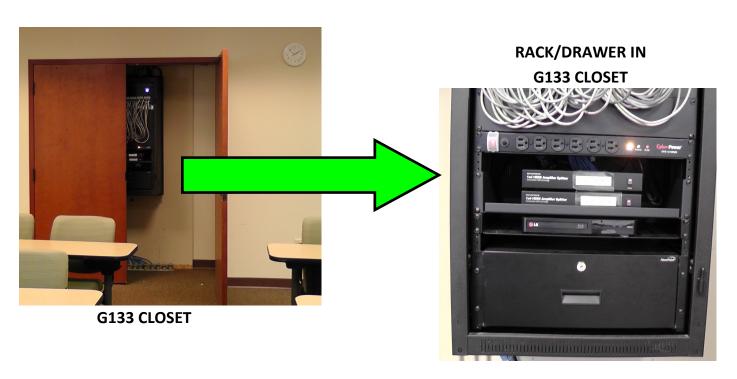


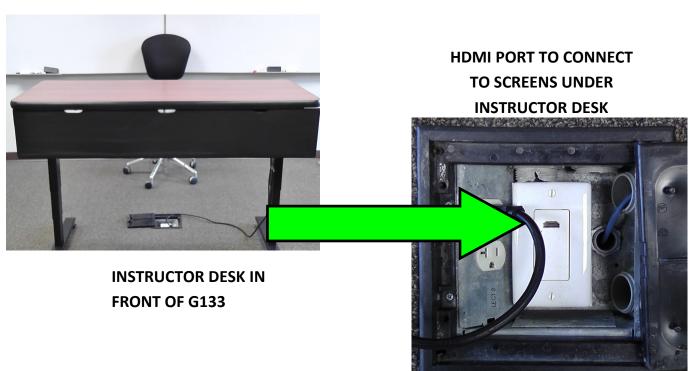

#### **SCREEN SHARE WITH LAPTOP/MAC (wireless)**




- FOLLOW THE ON-SCREEN INSTRUCTIONS TO DOWNLOAD/INSTALL LITESHOW
- YOU WILL NEED TO BE CONNECTED TO MTSOWIFI TO USE THIS FEATURE
- THE LOGIN CODE WILL CHANGE/REFRESH WITH EACH NEW LITESHOW SESSION THE CODE WILL NEVER BE THE SAME AS THE LAST CODE YOU USED

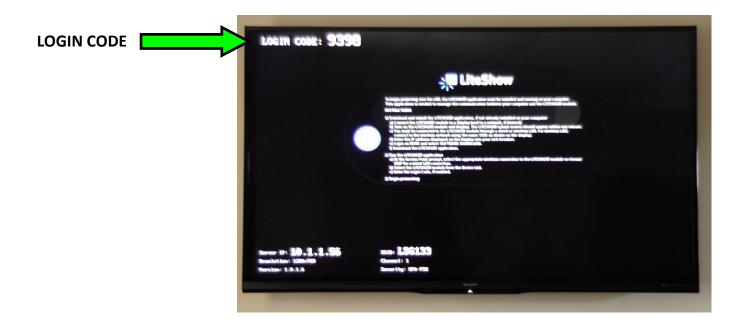

#### PLAY A BLURAY, DVD, OR AUDIO CD

### THE BLURAY (DVD) PLAYER IS LOCATED IN THE RACK OF THE G133 CLOSET THE REMOTE IS IN THE DRAWER & CAN BE USED AT THE FRONT OR BACK OF THE ROOM

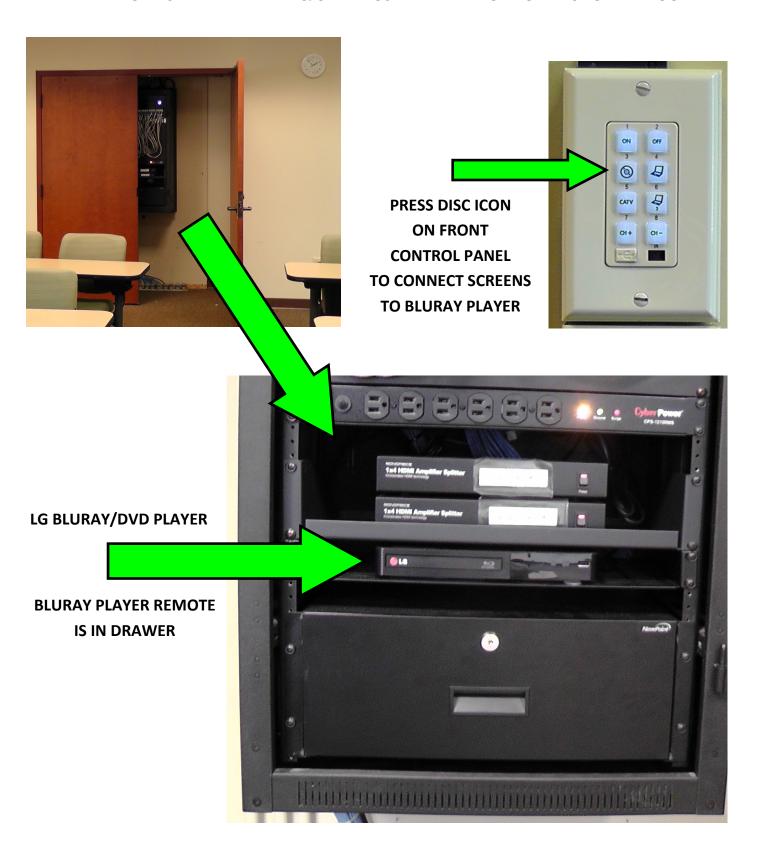

#### **SHUTDOWN SYSTEM**

